

ARROW CONTROL PANEL

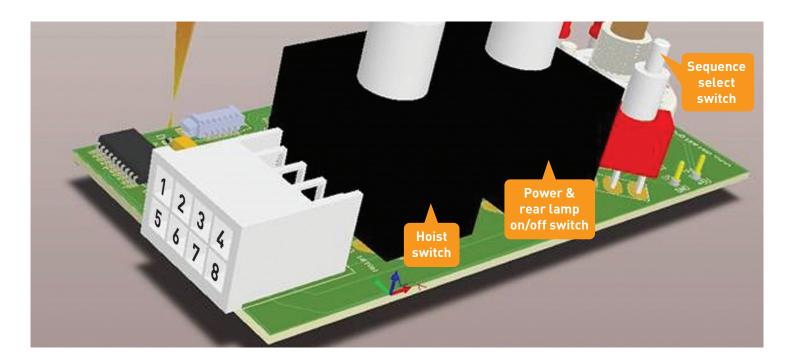

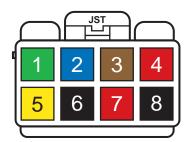

CONTROL PANEL JST CONNECTOR

Pin 1	RS-485 (A)	GREEN
Pin 5	RS-485 B	YELLOW
Pin 2	HOIST LIFT +	BLUE TO ACTUATOR
Pin 6	GND OUTPUT TO HEAD CONTROLLER	BLACK
Pin 3	HOIST LIFT -	BROWN TO ACTUATOR
Pin 7	+12V OUTPUT TO HEAD CONTROLLER	RED

FROM FUSE PANEL

Pin 4	+12V INPUT	RED
Pin 8	GND FROM BATTERY	BLACK







