



TRAILER TO HEAD LOOM WIRING HARNESS

TO NEW AERIAL

TO EXISTING AERIAL



FIT LOOM TO CONTROL BOX AS SHOWN TO ENSURE CABLE LENGTH IS LONG ENOUGH



VMS OPERATOR PANEL

P2

P1

EQUIPMENT FUSES


BATTERY CONNECTIONS

ADAPTAFLEX PROTECTIVE CONDUIT

SOLAR CHARGER

RM-32D CONNECTIONS

ANDERSON PLUG SOLAR INPUT / TOP OF SIGN HEAD

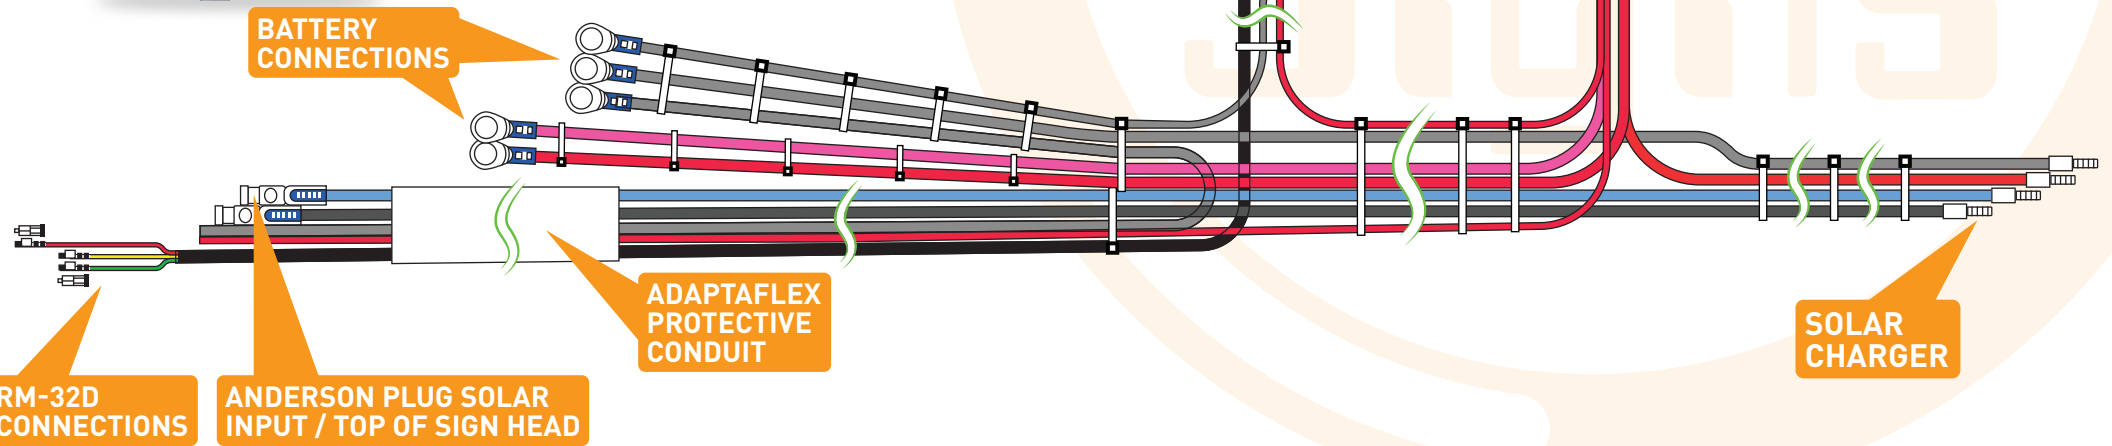



CHECKLIST FOR RM-32D INSTALLATION

 
Is loom fitted correctly for RM-32D controller as per reverse of this sheet?

If not, replace loom (must be done by qualified personel).
Order from Parts Online: <https://partsonline.datasigns.com.au>
Part number #12070.




Check if the controller is labelled with the same serial number as the sign it is being installed in. See label example. —————→

If not, lodge a Help Desk ticket to get his processed:
www.datasigns.com.au/servicesupport/helpdesk



⚠ Remove equipment fuses. —————→

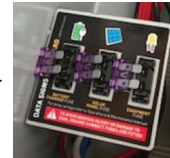

Is the battery voltage above 12.8V?

If not, recharge batteries.
For spare parts, order from Parts Online: <https://partsonline.datasigns.com.au>



Battery
[#32128]



Battery Charger
[#51822]



Solar Charger
[#12011] [#12012]

Replace fuses. —————→



Check controller status led for correct sequence. Download documentation from: www.datasigns.com.au/documents/helpdesk/status%20led.pdf