

Steps to update DS-LCT app on ST-1

- Connect your ST-1 to a secure Wi-Fi network.
- Open the DS-LCT app and go to the About tab
- Tap on the “SETTINGS” button
- On the Settings page, tap the “CHECK FOR NEW UPDATES” button

