


Separating and Joining the Front and Rear Trailers

OH&S: Wear PPE when working with the VMS-S5.






How to Correctly Separate Trailers.

- 1** Undo safety chains that hold the trailers together. Lift up locking bars.
- 2** On Rear Trailer, pull out rear jack stands, rotate all jack stands and lower 25mm from ground.
- 3** Uncouple front trailer from towing vehicle, then lower and **use both jockey wheels to level trailers in a straight line with each other.** Rear trailer jockey wheel must face inwards.
- 4** Pull out locking pin.
- 5** Use Link switch to engage actuator to push apart.

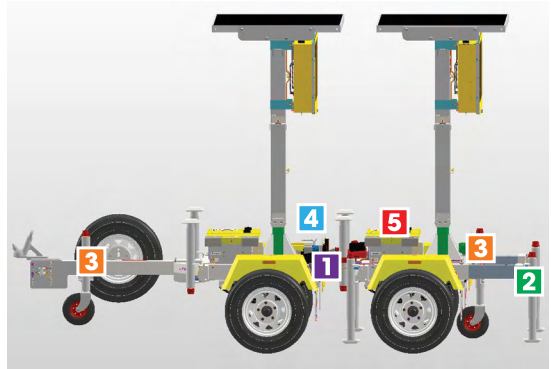

How to Correctly Join Trailers.


- 1** Use jockey wheels (rear wheel facing outwards) to level trailers.
- 2** Insert drawbar on rear trailer into coupling point on front trailer.
- 3** When rear drawbar is below locking pin, place pin back in.
- 4** Push down actuator arm and use.
- 5** Link switch to pull trailers together.
- 6** Ensure safety chains are looped through chassis on left and right, and secured. Adjust locking bars and lock down.

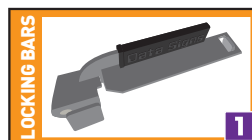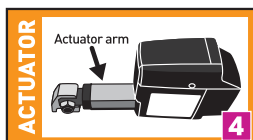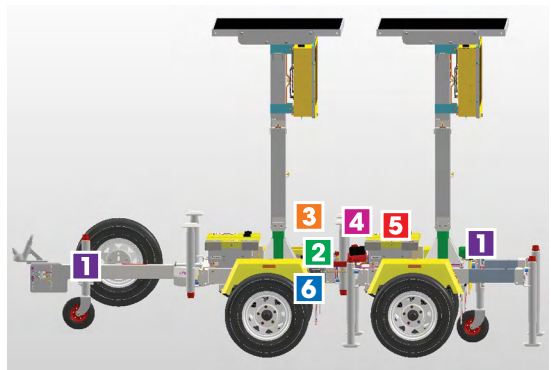



Programming Your Sign

To show message on Sign use the BLANK/SHOW switch located in the control box.

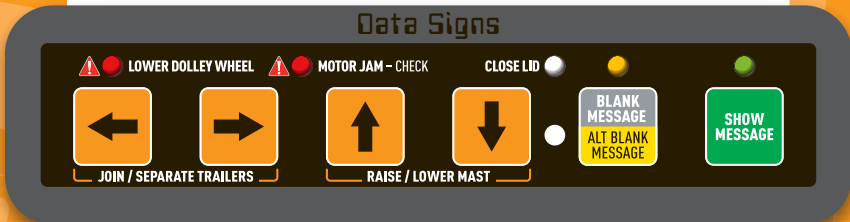

DS-Live™

Data Signs Web-based Sign Programming and Active Monitoring.

Data Signs DS-Live™

Data Signs DS-Live™ runs on all web browsers (it is optimized to work best on Google Chrome & Microsoft Edge). It is best suited to run on a PC or Laptop.


It can also work with various popular devices such as iPad, Samsung tablet, etc, however the screen may need to be scrolled to see different items due to the smaller screen size).



VMS App



ST-1

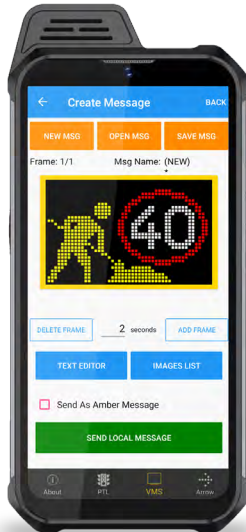

Data Signs ST-1
Smart Terminal Remote

DS-Lite, download App.

A portable smart phone App, .VMS, is also available on the App Store or Google Play.

These web-based applications allow you to update your Sign with new messages, track the location of each Sign, check the battery voltage. Blank and Resume messages etc.

A SIM & Data Plan is needed for DS-Live™.

Scan for Data Signs
ST-1 Manual





The Data Sign ST-1 Smart Terminal

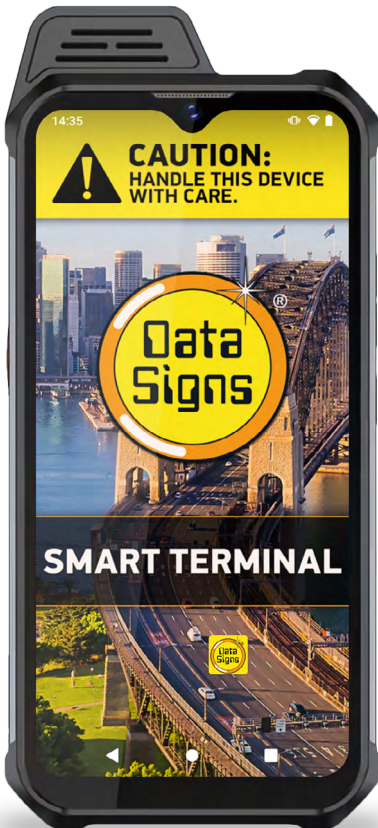


Table of Contents


Start-up Page	5
Connecting to the VMS-S5	6
Using the ST-1 to program the VMS-S5	7
Message Editor	8
Text Editor	9
Image List	10
Radar Setup	11
Creating Advanced Custom Messages	12

If SIM Card Fitted

Press-to-Talk Walkie Talkie	13
Removing/Restoring Sign Power	15
To Open Sign Head	15
LED Board / VMS-S5 Maintenance	16
Tow Coupling Adjustment	28

■ Start-up Page

A Start-up page is displayed when the ST-1 is turned ON, this is done by pressing and holding the lower-right side button.


Press the  icon to start the Local Connect App.

Once the Local Connect screen is displayed, press the SETTINGS button.

Select the Auto Connect check box, then on the Startup Tab, select Variable Message Signs.


This will automatically connect the ST-1 with the last Paired sign next time it is switched on.

You can also check for new updates for the ST-1, or select to use the ST-1 in offline mode which is useful if you are not actually connected to a VMS-Sign.

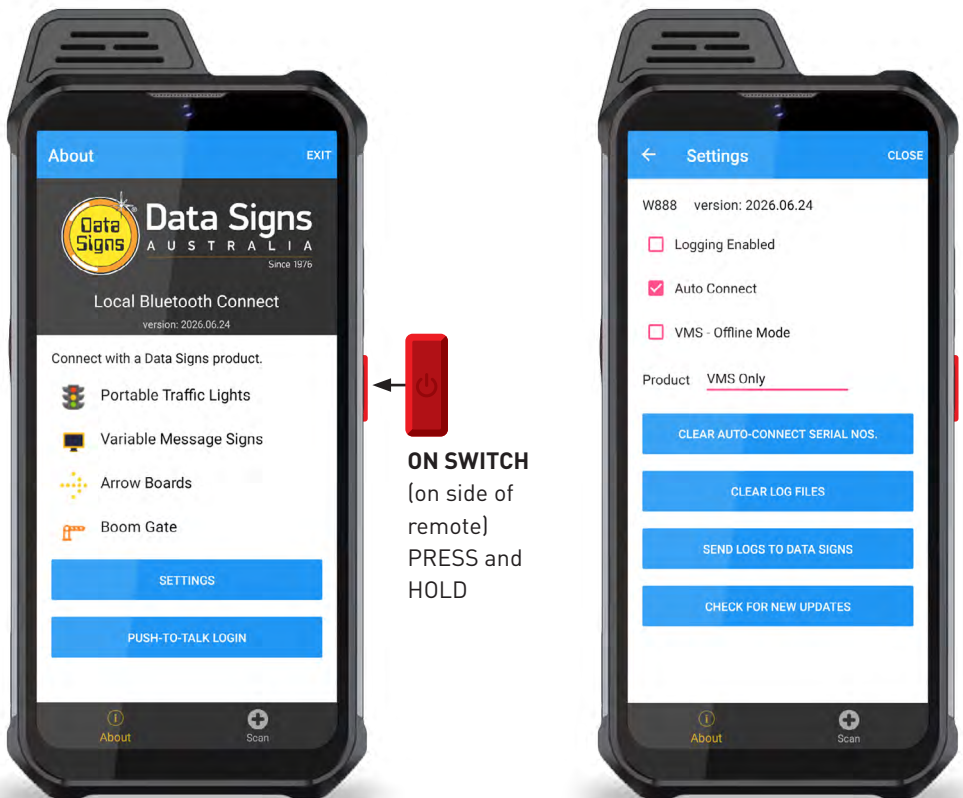

■ Connecting to the VMS-S5


If the Auto Connect option has been set (as per previous page) then the ST-1 will look to pair with your VMS.


If pairing for the first time press the  button .

Tap on the serial no. when it appears in the list. The remote will automatically connect with the last connected device if it is in range.

If the last connected device is not in range, the remote will continue scanning and will display all the relevant devices in range.

To stop automatically connecting with the last connected device, go to the Settings section and disable the Auto Connect option or tap the Clear Auto Connect Serial Nos button.

To stop scanning, tap the  button.

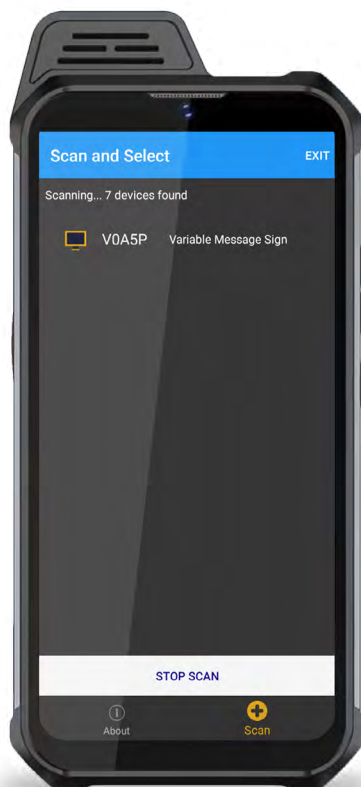

As the Bluetooth connection is established a progress sequence of 5-stars will appear, and the screen will redirect to the relevant remote screen.


To disconnect from a the VMS, tap the  button in the top right corner.

Disconnecting will stop the Bluetooth connection, but the VMS will continue its last operation.

■ Using the ST-1 to Program the VMS-S5

Once the ST-1 has paired with your VMS Sign, the current details of the VMS are displayed.

Green icons indicate all is OK. Amber icons indicate a warning. Red icons indicate an error. Gray icons indicate the feature is either disabled or not running.

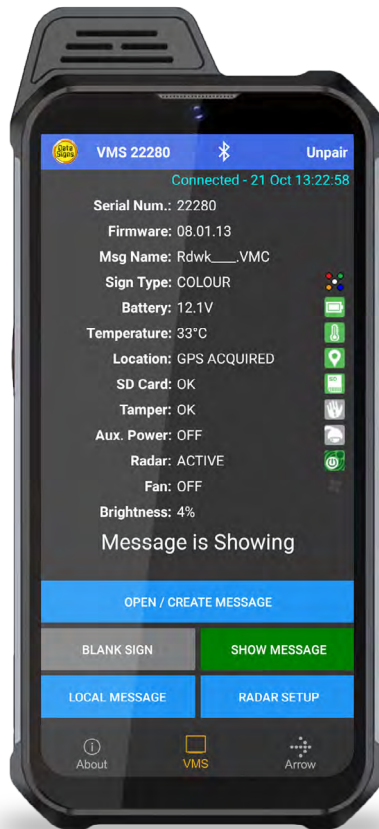


The VMS board can be BLANKED by tapping the **BLANK SIGN** button and similarly to SHOW the Message, tap the **SHOW MESSAGE** button.

To change the message on the sign, tap the **OPEN / CREATE MESSAGE** button.

Message Editor

Normally Message and Radar settings are edited, created or sent to the VMS while it is paired to the VMS Sign, if it is not paired use the *VMS – Offline Mode* which can be selected from Settings Menu.

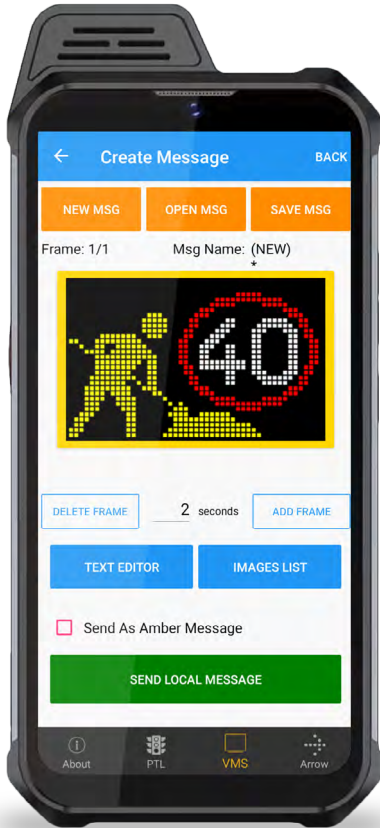

NEW MSG: will clear and start a new message

OPEN MSG: will load a list of saved messages and an option to delete the local messages

SAVE MSG: will save the current message to the local device.

TEXT EDITOR: will open the text-editor module to setup a textual frame.

IMAGES LIST: will open the image-list module with a list of 99 pre-defined images.

ADD FRAME: will add an empty frame either before or after the current frame.

To change the duration of a frame, change the number in seconds.

DELETE FRAME: will delete the current frame

SEND LOCAL MESSAGE: will upload the message via Bluetooth to the VMS

If you want the message to appear as Amber only, select the “Send As Amber Message” checkbox first.

The arrow buttons can be used to navigate between frames.

■ Text Editor

This section facilitates creation of a text message of up to 4 lines. Each line can have a different colour, font size and left or centre alignment.

A line of text can contain maximum 12 characters.

For optimum visibility, 3 lines of text, 8 characters wide (2nd font from right) is recommended.

When finished, tap the **CONFIRM** button to save and set the message on the current frame.


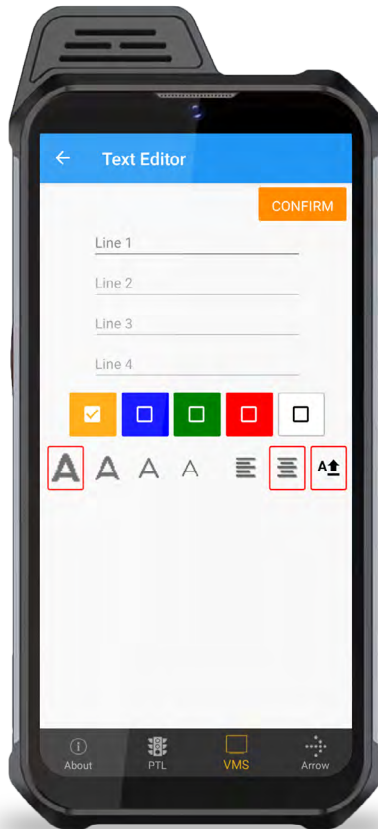


Image List


This section has a list of 99 pre-defined images to select from.

Tap on **Select** to set the image to the current frame.

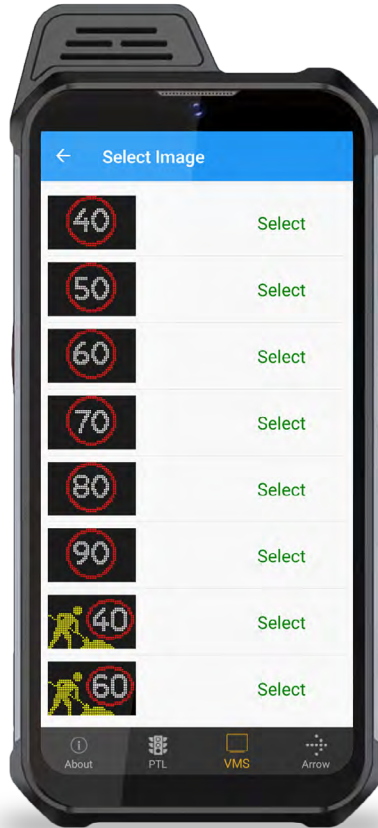

For custom images or messages, see *Creating Advanced Custom Messages*, page 14.

■ Radar Setup

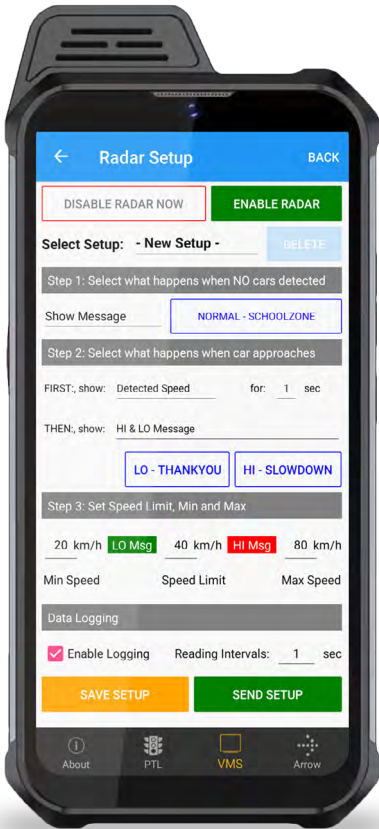

Start by tapping the **ENABLE RADAR** button.

Either select a saved setup or create a new Setup.

STEP 1: Select a message to show when NO vehicles are detected.

STEP 2: Select what happens when a vehicle approaches the sign.

If you wish to display a Hi & Lo Message then select the appropriate message.

STEP 3: Set the road Speed Limit and then set the Max and Min limit.

Enable Data Logging if you wish.

(Data Logs are retrieved via the DS-Live Platform and can be set to send to an e-mail address. This requires a Data Plan and SIM card to be fitted to the VMS)

Finally tap **SAVE SETUP** and then **SEND SETUP** to send it to the VMS.

The setup will be saved on the ST-1 remote.

■ Creating Advanced Custom Messages


DS-Live Message

DS-Live Message is a new feature allowing messages created in DS-Live to be uploaded to a VMS board via Bluetooth. Internet access is required to use this feature.


1. Connect to a VMS via Bluetooth and tap the **DS-LIVE MESSAGE** button.

If internet access is required, a prompt will be displayed. To enable internet access, use either a local WiFi connection, or hotspot to a Mobile phone.

If you do not have access to DS-Live, please contact Data Signs to set this up.

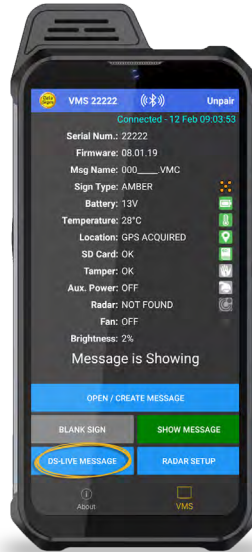


2. After connecting to the internet, tap the **DS-LIVE MESSAGE** button and log into DS-Live entering your regular login details.
3. After login, select the relevant Folder and Message from the list and tap the **SEND TO ST-1** button.
4. Please wait for the message upload to complete. Do not move away from the VMS as it will disconnect the Bluetooth connection.

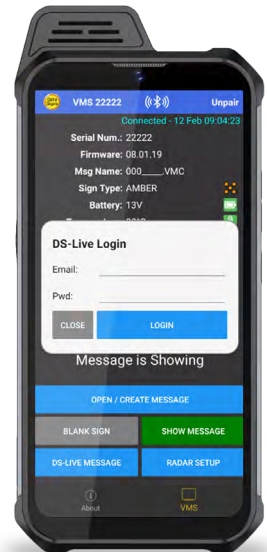

■ Press-to-Talk Walkie Talkie


Push-To-Talk (PTT) is an app in DS-LCT that allows users to communicate with each other. PTT uses a special (orange) button on the ST-1 and requires internet access.

1. Log into **DS-Live** and go to the **Admin** > **Manage Users** section.
2. Click on **Manage Push-To-Talk Channels** and setup a Secure Channel and Password.

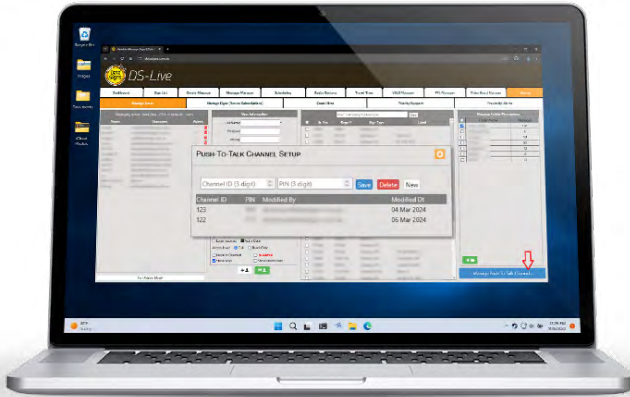

3. Open the DS-LCT app on your ST-1 and from the About tab, tap the "Push-To-Talk" button.

If internet access is required, a prompt will be displayed.

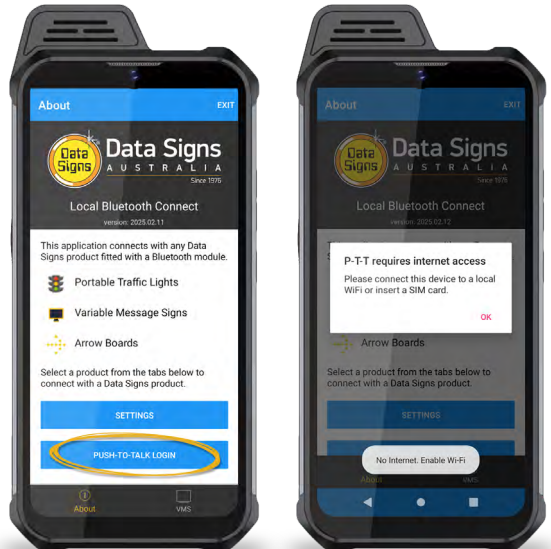


- To enable internet access, insert a SIM card into the phone.

On the ST-1 home screen, swipe up and tap the Settings icon.



Go to Network & Internet, tap **Mobile Network** and enable **Mobile Data**.

Or use your mobile phone with Hotspot enabled.

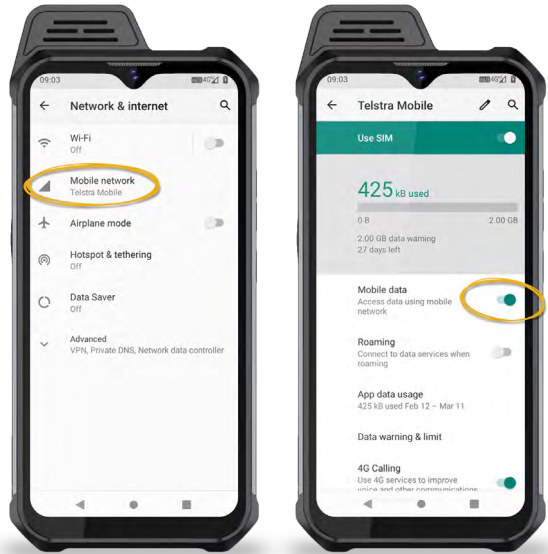


- After connecting to the internet, tap the



button and enter the agreed Secure Channel ID and PIN.

NOTE: devices that need to communicate with each other have to login on the same Secure Channel.

- After connecting to a Secure Channel, push the orange PTT button on the ST-1 to communicate.

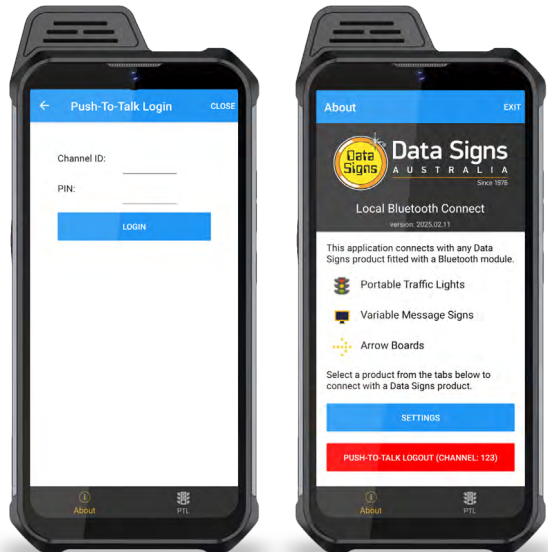

■ Removing/Restoring Sign Power

Disconnect the power to the Sign for long-term storage (i.e. longer than a month), for long distance transport, or when working on the Sign. To disconnect the power follow the instructions below.



1. Open the Sign head as per below section.
2. To remove Sign power, pull out the SIGN SUPPLY fuse.



CAUTION: If working on the Sign for repair (i.e. welding) disconnect ALL fuses.

To restore Sign power, insert the SIGN SUPPLY fuse. Push down to ensure it is properly fitted.

Notes for undercover storage:

Storage outside is recommended so batteries can maintain charge via the solar array. If storing the Sign undercover for a long-term (i.e over one week), unplug the SIGN SUPPLY fuse. Please be aware that the batteries *will* drain over time; therefore fitting a battery charger is recommended. Battery warranty is voided if batteries allowed to drain below serviceable levels.

■ To Open Sign Head



Watch the instructional video
on the Data Signs Help Desk.
datasigns.com.au/help

The Data Signs T tool can be used to open the sign head.


Undo battery terminals, and use a drill tool to quickly set up the trailer jack stands and dolly wheels



■ LED Board Maintenance



Watch the instructional video on the Data Signs Help Desk.
datasigns.com.au/help

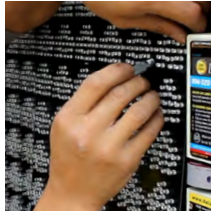

If maintenance on the LED boards is required, the T tool can be used as shown to unclip the board holder.



■ VMS-S5 Maintenance

This section details the maintenance procedures. It is important that your VMS-S5 are regularly maintained to make certain that your VMS-S5 is in continued working order. Note: The Warranty associated with your VMS-S5 may be voided if ad-hoc repairs outside the scope of this maintenance section are attempted.

Solar Panels

Keeping the Solar panels clean will ensure they are providing as much energy to charge the battery as possible. To clean the Solar panels, ensure the PTL mast is lowered and that the Jackstands are lowered and extenders fully out.

With a damp and soapy cloth, clean each of the panels, or hose them down (see General Cleaning notes). The solar panels should be cleaned periodically since they can quickly become dusty.

Battery & Circuit Breakers

125AH AGM SEALED BATTERY



CAUTION: LEAD ACID BATTERIES CAN PRODUCE FLAMMABLE GASES WHILE CHARGING. NO NAKED FLAME SHOULD BE ALLOWED NEAR THE PTL'S. TAKE CARE WHEN OPENING AND CLOSING THE BATTERY BOX LID. USE TWO HANDS.



Before attempting any maintenance work on your batteries, make sure the VMS-S5 is not in the sun and that it is located in a well ventilated area.

- **Remove the fuses.**
- **Re instate fuses afterwards.**
- **All fuses are normally 25Amp**

Corrosion inhibitor lacquer has been applied to the battery terminals, if replacing battery, use the same after installation to maintain this protection.

If replacing the battery, use the same rating and type of batteries.

Notes for Undercover storage: Storage outside is recommended so the battery can maintain charge via the solar array. If storing the trailer undercover for a long-term, unplug the SIGN SUPPLY fuse. Please be aware that the battery will drain over time; therefore fitting a battery charger is recommended.

Trailer Wheels and Wheel Bearings

Regularly check the tyre pressure. At the same time check tyre condition and that the wheel nuts are tight. After a few months of use have a qualified mechanic check. Grease the wheel bearings every 12 months under normal operating conditions. More frequently for adverse/harsh road or operating conditions. Further, check after having travelled 1500 km.

Torque setting for wheel nuts: 65lbs.ft or 90Nm
Tyre Pressure for VMS-S5: 50 psi

Ensure wheel nuts are tightened according to manufacturer specifications for this trailers' tyre size. If unsure, contact your local mechanic. 13" wheel size, Ford stud pattern.

General Cleaning

The lights and trailer can be hosed. No abrasive solvents or thinners can be used anywhere on the VMS-S5.

■ Tow Coupling Adjustment

Adjust the tow coupling to fit snugly onto the tow ball of the towing vehicle to improve tow ride. This adjustment is not completed during manufacture as each vehicle tow ball may be a slightly different diameter due to wear or other factors. In Australia, the tow coupling is designed to fit a 50mm ball. Flathead screw driver and shifter required. This is a guide only, please view the disclaimer at the end of the document.



CAUTION: ENSURE THE TOW BALL IS AT THE CORRECT HEIGHT TO THE TOWING VEHICLE, AS INCORRECT AND UNLEVEL TOWING WILL CAUSE DAMAGE TO THE REAR TRAILER COUPLING MECHANISM.



CORRECT HEIGHT ADJUSTMENT IS MADE BY ADJUSTING THE TOW COUPLING HEIGHT ON THE DRAW BAR USING THE REMOVABLE PINS AS SHOWN ABOVE.



Adjusting the Tow Coupling

1. Fit the tow coupling to the vehicle and lock in place. Raise the jockey wheel.
2. Release the locking nut.
3. Undo the locking nut to give some leeway.
4. Using a flat-head screw driver on the slot on top of the pin-bolt, turn until tight, and then loosen very slightly. This will pull the coupling forward onto the tow ball and grip it.
5. Check that you can still unhook the coupling without too much effort, but maintaining a tight fit on the tow ball when attached. Use the jockey wheel to assist if required.
6. Hold the Pin-bolt with the screwdriver and then tighten the locking nut firmly with a shifter.